SETU ATA211
Quick Start

MATRIX
TELECOM SOLUTIONS

Disclaimer

Matrix Comsec reserves the right to change, at any time, without prior notice, the product design, specifications, components, as engineering and manufacturing may warrant.

This is a general documentation for all models/configurations of the product. The product may not support some of the features/facilities described in this document.

While every reasonable effort has been made to ensure accuracy of content in this document, Matrix Comsec assumes no responsibility for errors or omissions that may occur herein. No liability is assumed for damages, costs, expenses resulting from unauthorized modifications or repairs to the product; failure to use information or to comply with the installation, operation and maintenance instructions contained in this document.

Copyright

All rights reserved. No part of this document may be copied or reproduced in any form or by any means without the prior written consent of Matrix Comsec.

Version 3
Release date: February 2, 2011

MATRIX
TELECOM SOLUTIONS

SETU ATA211

VoIP-FXS-FXO Adaptor

Quick Start

Package Contents

- SETU ATA211
- Adapter 12V, 1.25 Amp
- Ethernet Cables (RJ45 and RJ11)
- Two wall mounting screws and screw grips
- Warranty Card
- Quick Start and User Card
- CD (System Manual, Quick Start and User Card)

Thank you for choosing SETU ATA211! Please read the instructions in this Quick Start to install and configure the basic settings to make and receive VoIP and PSTN calls.

Connecting SETU ATA211

Select an appropriate site and mount SETU ATA211.

Do not install the system at the places where shocks or vibrations are frequent or strong.

Use only the power adapter included in the SETU ATA211 package. Using an alternative non-qualified power adapter may possibly damage the unit.

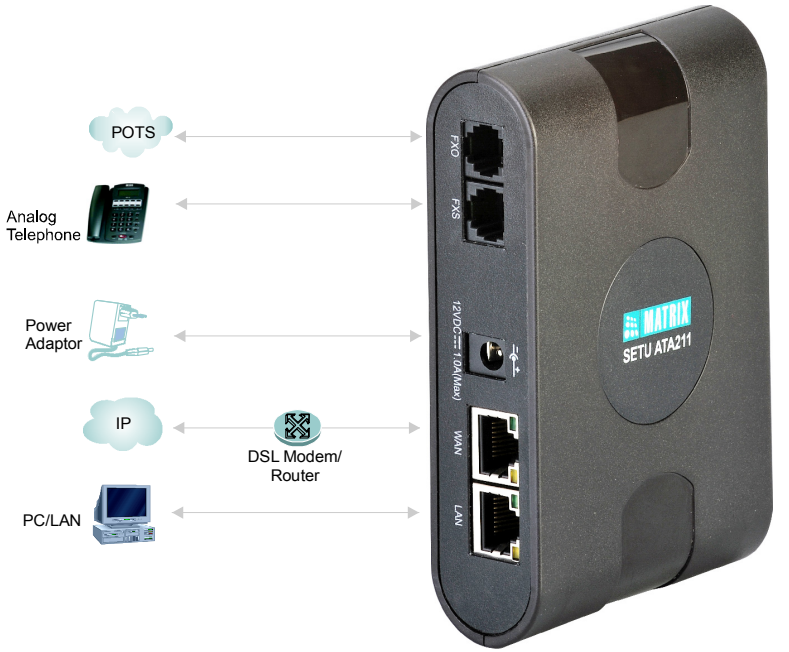

- Connect a standalone PC/ LAN Switch to the **LAN Port** of SETU ATA211 using the Ethernet cable.
- Connect the **WAN Port** of SETU ATA211 to the IP Network—A DSL modem/ router *or* LAN Switch—using the Ethernet cable.

- Connect a telephone to the **FXS Port** of SETU ATA211, using a standard telephone cable with an RJ11 plug.
- Connect the line from PSTN to the **FXO Port** of SETU ATA211.
- Connect the power adapter provided with SETU ATA211 to the power jack labeled **12VDC-1A(MAX).**
- Connect the adapter plug into a power outlet.
- Switch ON power.

Configuring SETU ATA211

SETU ATA211 provides an embedded web server with a graphic user Interface (GUI), *Jeeves*, for configuration. You can access this embedded web server on the PC you connected to the LAN Port.

The default IP Address of the LAN Port of SETU ATA211 is: **192.168.002.6**
The default Subnet Mask of the LAN Port of SETU ATA211 is: **255.255.255.0**

- Make sure your PC is in the same Subnet as the LAN Port of SETU ATA211. Change the Subnet Mask of the PC, if necessary.
- Open a web browser (Internet Explorer Version 7 or higher or Mozilla Firefox 3.5 or higher) on the PC.
- Type **192.168.002.6**, the default IP Address of the LAN Port of SETU ATA211 in the address bar of the browser.

The Login page opens.

setuata211 - Mozilla Firefox
File Edit View History Bookmarks Tools Help
http://192.168.2.6/htmlpages/startup.html
Most Visited Getting Started Latest Headlines
setuata211
MATRIX
SETU ATA211
Deutsch English Español Français Italian Português
Login As
Admin
Password
Admin
User
Login
OFFICE : 394-GIDC, Makarpura, Vadodara-390010, India Ph : +91-265-2630555 Fax : +91-265-2636598
WARNING : No part of the system should be copied or reproduced in any form or by any means without the prior written consent of Matrix Comsec Pvt. Ltd.
Copyright © 2010 Matrix Comsec Pvt. Ltd.
This is based on GoAhead Webserver.
goahead
WEBSERVER

You can also use the WAN Port of SETU ATA211 to access the embedded web server in the same manner.

The default IP Address of the WAN Port of SETU ATA211 is: ***192.168.001.171***

The default Subnet Mask of the WAN Port of SETU ATA211 is: ***255.255.255.0***

SETU ATA211 offers two Login modes: Admin and User.

- The **Admin** mode allows you to configure the entire system, access all system features and facilities.
- The **User** mode allows you configure, set or cancel specific features and facilities.

To configure SETU ATA211,

- In the **Login As** box, select **Admin**.

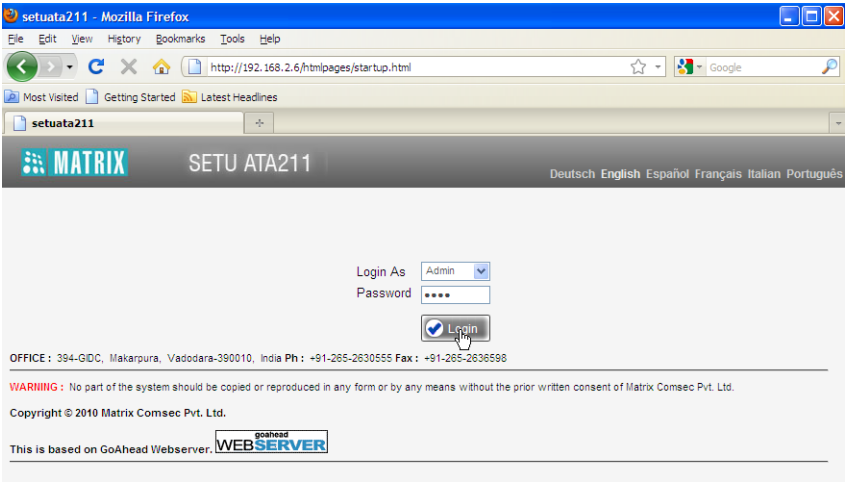
setuata211 - Mozilla Firefox
File Edit View History Bookmarks Tools Help
http://192.168.2.6/htmlpages/startup.html
Most Visited Getting Started Latest Headlines
setuata211
MATRIX
SETU ATA211
Deutsch English Español Français Italian Português
Login As
Admin
Password
Login
OFFICE : 394-GIDC, Makarpura, Vadodara-390010, India Ph : +91-265-2630555 Fax : +91-265-2636598
WARNING : No part of the system should be copied or reproduced in any form or by any means without the prior written consent of Matrix Comsec Pvt. Ltd.
Copyright © 2010 Matrix Comsec Pvt. Ltd.
This is based on GoAhead Webserver.
goahead
WEBSERVER

- In the **Password** field, enter **1234**, the default Admin password.
- Click **Login** button.
- On successful login, the Home page will open.

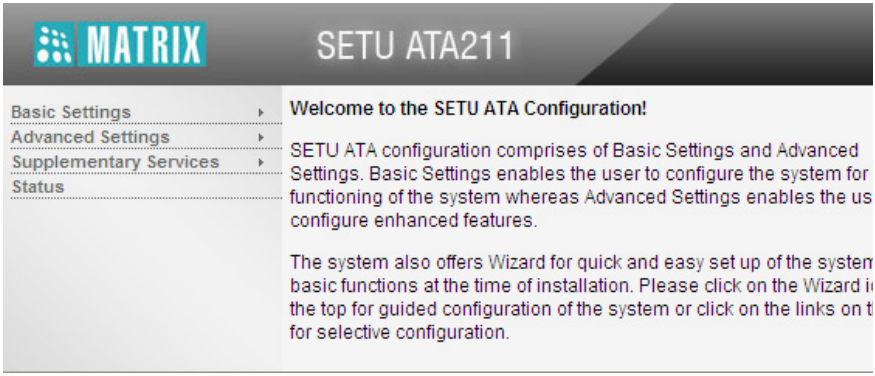
MATRIX
SETU ATA211
Basic Settings
Advanced Settings
Supplementary Services
Status
Welcome to the SETU ATA Configuration!
SETU ATA configuration comprises of Basic Settings and Advanced Settings. Basic Settings enables the user to configure the system for functioning of the system whereas Advanced Settings enables the us configure enhanced features.
The system also offers Wizard for quick and easy set up of the system basic functions at the time of installation. Please click on the Wizard i the top for guided configuration of the system or click on the links on t for selective configuration.

The links **Basic Settings**, **Advanced Settings**, **Supplementary Services** and **Status**, appear on the left pane.

Basic Settings are sufficient to get your SETU ATA211 into operation.

To set up and operate your system, quickly,

- Click **Basic Settings** link.

  The links to the different basic parameters appear on the left pane.

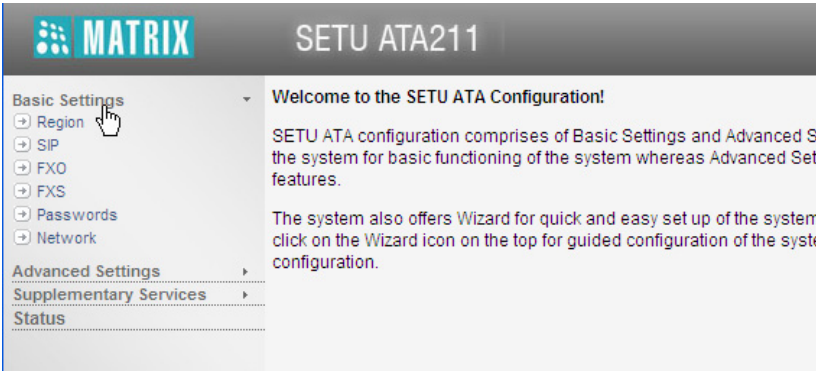

  You may either use the *Wizard* to guide you through the configuration or selectively configure the Basic Settings pages.

When you use selective configuration,

- Click **Basic Settings** link to expand.
- Click each parameter link, **Region**, **SIP**, **FXO**, **FXS**, **Passwords**, **Network**.

  The selected parameter page opens.

- Set the desired values on the page.
- Click **Submit** to save your settings on the page.

When you use the *Wizard*,

- Click the Wizard icon on the top right of your screen.

MATRIX
SETU ATA211
Region
SIP
FXO
FXS
Passwords
Network
Welcome to the SETU ATA Wizard!
The wizard shall help you steer the configuration of the SETU ATA for bas
Configure the parameters as per your requirements on the page. Click 'N
changes to the configuration file and click 'Back' to go to the previous pag
page.
To continue, click 'Next'
Next

- The **Next** button takes you to the next page, saving the changes you made on the current page.
- The **Back** button returns you to the previous page.
- The **More** button expands parameters on the page.
- The **Less** button collapses parameters on the page.
- The **Default** button assigns factory set values to all the parameters on the page .
- The **Quit** button allows you to exit the Wizard at any stage, saving changes you made before exiting.

Read the System Manual for detailed instructions.

MATRIX COMSEC PVT. LTD.

Corporate Office:
394-GIDC, Makarpura, Vadodara - 390010, India.
Tel.:+91 265 2630555, Fax: +91 265 2636598
E-mail: Info@MatrixComSec.com

Factory:
39-GIDC, Waghodia - 391760, Dist. Vadodara, India.
Tel.: +91 2668 262056/57

Technical Support:
Tel.: +91 2668 263172/73, Fax: +91 2668 262631
E-mail: Support@MatrixComSec.com

www.MatrixComSec.com

Version 3, February 2011